



## HARDSTREET PRO BUILDER CUSTOM SADDLEBAG KIT

THIS PRO BUILDER CUSTOM SADDLEBAG KIT COMES COMPLETE WITH SADDLEBAGS, MOUNT BRACKETS AND ALL MOUNTING HARDWARE.

MADE OF DURABLE ABS PLASTIC, THESE BAGS FEATURE A QUALITY FIT AND FINISH, ARE SECURE/LOCKABLE AND WEATHER RESISTANT.

### ASSEMBLY INSTRUCTIONS:

SEE OPPOSITE SIDE FOR PARTS LIST!!!

1. START WEATHER STRIPPING OPPOSITE LOCK KEEPER AND RUN AROUND TOP OF SADDLEBAG. TRIM FLUSH. (FIG. 1)
2. PLACE INTERNAL BAG BRACE IN SADDLEBAG ( FIG. 2) AND ATTACH KEEPER WITH 6MM X 20MM BOLTS THROUGH SHOULDER WASHER AND SPLIT LOCK WASHER, WITH ACORN NUTS. (FIG. 3) \*(ALSO SEE ILLUSTRATION 1 ON OTHER SIDE)
3. PLACE THUMB LATCH ON TOP OF LID AND INSERT LOCK WITH LATCH TO REAR OF BAG, AND SECURE WITH LOCK WASHER AND NYLON RETAINER NUT. (FIG. 4)
4. ATTACH PIANO HINGE TO OUTSIDE OF LID WITH 6MM X 20MM BOLTS, FLAT WASHER, SPLIT WASHER, AND ACORN NUT. (FIG.5)
5. ATTACH LID TO SADDLEBAG WITH 6MM X 10MM STAINLESS BOLTS THROUGH HINGE AND LID TO BILLET EMBLEM. (FIG. 6) BEFORE TIGHTENING BOLTS COMPLETELY, CLOSE LID TO ENSURE CORRECT FIT. TIGHTEN ALL BOLTS.
6. ATTACH REFLECTOR 2" FROM BOTTOM AND 2.5" FROM REAR OF SADDLEBAG. (FIG. 7)
7. INSTALL BULLET ENDS TO BRACKET WITH 6MM X 12MM BUTTON HEAD SCREWS. (FIG. 8)

**NOTE: YOU MAY CHOOSE TO MOUNT YOUR BRACKETS TO YOUR MOTORCYCLE BEFORE OR AFTER ATTACHING THE SADDLEBAGS.**

8. IF YOU ARE INSTALLING BRACKETS BEFORE MOUNTING SADDLEBAGS, DO IT NOW WITH STEEL SPACERS AND 3/8" BOLTS AND STAINLESS WASHERS. BRACKETS SHOULD BE FLUSH AND LEVEL WITH ONE ANOTHER. (FIG. 12)
9. TO INSTALL THE SADDLEBAG TO THE BRACKET, PUSH METAL BUSHINGS INTO ROUND RUBBER GROMMETS AND WITH RUBBER STRAP ON OUTSIDE OF SADDLEBAG, PUSH BUSHING THROUGH INSIDE SADDLEBAG HOLE THROUGH HOLE IN STRAP. (FIG. 9) \*(ALSO SEE ILLUSTRATION 2 ON OTHER SIDE)
10. USE 1/4" X 20 X 1.25" BOLT WITH 1" FENDER WASHER THROUGH INSIDE SADDLEBAG BUSHING AND 1/4" WASHER AND LOCK NUT ON OUTSIDE OF BRACKET TO SECURE SADDLEBAGS TO BRACKET. DO THIS TO ALL FOUR MOUNT HOLES. DO NOT OVER TIGHTEN BOLT AS DAMAGE MAY RESULT. (FIG. 10)
11. IF YOU DID NOT MOUNT BRACKETS TO BIKE, OPEN LID TO SADDLE BAGS AND MOUNT BRACKETS USING STEEL SPACERS AND 3/8" BOLTS. (FIG. 12)



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6



Figure 7



Figure 8



Figure 9



Figure 10



Figure 11



Figure 12

**WARNING:** IMPROPER LOADING CAN ADVERSELY AFFECT HANDLING. -EVENLY DISTRIBUTE WEIGHT BETWEEN BAGS FROM SIDE TO SIDE -DO NOT EXCEED THE MAXIMUM LOAD OF 11LBS. (5KG) PER BAG. -DO NOT EXCEED SPEEDS OF 80 MPH (120 KM/H) WITH SADDLE BAGS BECAUSE HANDLING MAY BE AFFECTED. THE MAXIMUM SPEED MAY BE REDUCED BY SUCH FACTORS AS IMPROPER LOADING, POOR TIRE OR OVERALL MOTORCYCLE CONDITIONS, POOR ROAD SURFACES, OR ADVERSE WEATHER CONDITIONS. -CHECK OWNER'S MANUAL FOR IMPORTANT LOADING AND TIRE PRESSURE SPECIFICATIONS -CHECK ALL FASTENERS REGULARLY THAT THEY ARE TIGHT AND IN GOOD CONDITION -CHECK OWNER MANUAL FOR TOTAL ACCEPTABLE WEIGHT LIMITS OF RIDER, PASSENGER, ACCESSORIES, AND CARGO THESE ITEMS SHOULD NOT EXCEED MOTORCYCLE'S TOTAL WEIGHT LIMITS AND SPECIFICATIONS.



# HARDSTREET PRO BUILDER CUSTOM SADDLEBAG KIT

THIS PRO BUILDER CUSTOM SADDLEBAG KIT COMES COMPLETE WITH SADDLEBAGS, MOUNT BRACKETS AND ALL MOUNTING HARDWARE.

MADE OF DURABLE ABS PLASTIC, THESE BAGS FEATURE A QUALITY FIT AND FINISH, ARE SECURE/LOCKABLE AND WEATHER RESISTANT.

## PARTS/HARDWARE LIST:



## BRACKET INSTALLATION:

PLEASE READ AND UNDERSTAND THESE INSTRUCTIONS COMPLETELY BEFORE INSTALLATION TO AVOID INJURY TO YOURSELF, TO THE ACCESSORY, OR DAMAGE TO THE MOTORCYCLE.

DEALER: THESE INSTRUCTIONS CONTAIN IMPORTANT INFORMATION FOR FUTURE REFERENCE AND MUST BE GIVEN TO THE CUSTOMER.

NOTE: YOU MAY NEED TO RELOCATE TURN SIGNALS DEPENDING ON MOTORCYCLE MODEL. CHECK [WWW.HARDSTREET.COM](http://WWW.HARDSTREET.COM) OR YOUR LOCAL DEALER FOR SIGNAL RELOCATION OPTIONS.

NOTE: FOR BOLTS THAT DO NOT USE A LOCKING NUT, USE AN APPROVED THREADLOCK. SEE YOUR BIKES OWNER'S MANUAL FOR APPROVED THREADLOCK SPECIFICATIONS.

1. PLACE THE MOTORCYCLE SECURELY ON ITS SIDE STAND. REMOVE ANY PASSENGER FOOTPEGS, BACKREST, AND TURN SIGNALS THAT MAY INTERFERE.
2. INSTALL BRACKETS BY USING MOUNT BOLTS, STAINLESS WASHERS AND STEEL SPACERS PROVIDED. (FIGS. 13-14)  
NOTE: SPACERS WILL NOT BE NEEDED IF USING HD QUICK RELEASE SYSTEM FOR BACKRESTS.
3. IF USING A 3 POINT SOFTTAIL BRACKET, INSTALL PASSENGER FOOTPEG OR 3/8" BOLT THROUGH MOUNTING HOLE.
4. CHECK ALL FASTENERS TO ENSURE THAT THEY ARE TIGHT AND IN GOOD CONDITION.



Figure 13



Figure 14

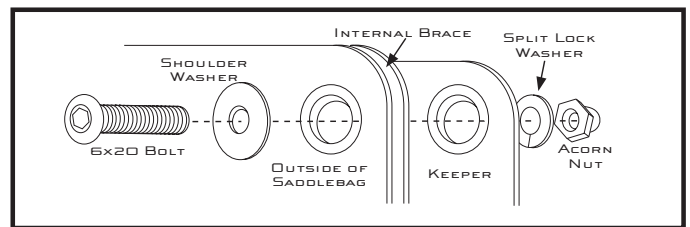


Illustration 1

## MAINTENANCE:

- PERIODICALLY CHECK ALL FASTENERS FOR TIGHTNESS AND RE-TORQUE AS REQUIRED.

## CUSTOMER SERVICE:

- FOR FURTHER INFORMATION CONTACT US TOLL-FREE AT 1-800-770-2259 OR ON-LINE AT [WWW.HARDSTREET.COM](http://WWW.HARDSTREET.COM)

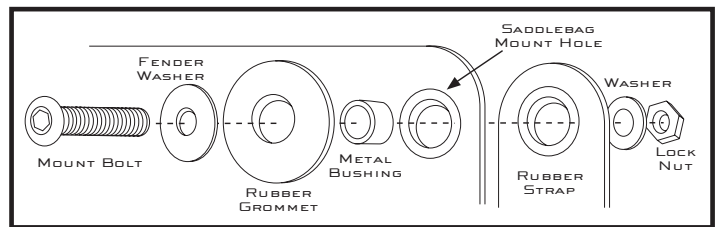


Illustration 2